



INTRACOM

netMod



Installation of netMod

Installation of netMod

netMod can be wall mounted or desktop. Wallmounting is achieved through the two mounting points, located on the back side of netMod (the distance between the two mounting points is 10cm), as shown in the next figure.



Figure 1: netMod's mounting points To install netMod follow the instructions given below (see Figure 2):

- ☞ Remove the front cover of the device.
- ☞ Connect the **U-line** (2-wire cable of the ISDN service provider) to the corresponding **RJ-11** jack.
- ☞ Plug the AC mains cable to the wall jack.
- ☞ Check the green LED status on the top side of netMod: The AC Mains Power LED should be lit.
- ☞ Depending on the devices that you want to connect, use the relevant jacks:
 - **RJ-11** jacks (**P1**, **P2**) for the analogue devices (analogue telephone, fax).
 - **RJ-45** jack for the ISDN devices.
 - **RS232** serial port for the personal computer (PC).
 - **USB** port for the personal computer (PC).

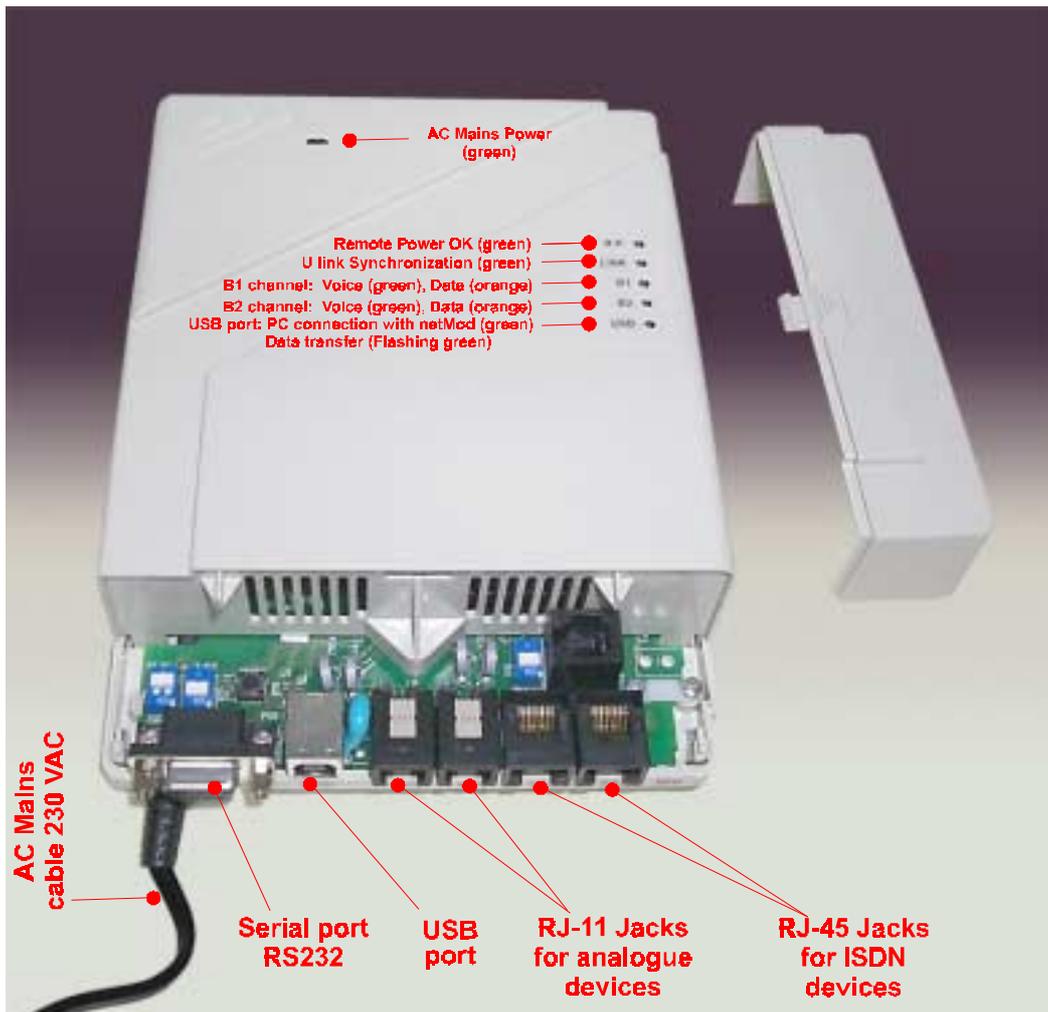


Figure 2: netMod's Connections

The following steps are required in order to install the **netMod**:

- ☞ Turn off the power of the PC
- ☞ Connect the male end of the 9-pin cable to the serial port of **netMod** or the **USB connector** to the **USB** receptacle of the **netMod**
- ☞ Connect the female end of the 9-pin cable to the computer's serial port or the **USB connector** to the **USB** receptacle of your PC
- ☞ Turn the PC on.

! Never connect the serial port cable to a device currently in use. The device can be damaged.